



HCN ATTAMCHMENTS CONTENT YOUR NEED

PRODUCT OPERATION MANUAL

Our contact information:

Address: No.1 Huake Road, Xuzhou Economic and
Technological Development Zone,
Xuzhou, China

Postcode: 221004

Tel: 0516-66881280 66881281

Fax: 0516-66881272

Website: <http://www.hcn-atta.com>

Model Name: 050701 Bale Spears

Preparation date: 2024.5.24

XUZHOU HCN ATTACHMENT MANUFACTURE CO., LTD.

Warm reminder:

Please read the manual carefully before installing and using the product.

CATALOGUE

1. Safety Instruction	2
2. Product Instruction	3
3. Operation Instruction	3
4. Maintenance Instructions	4
5. Storage Instructions	4

Safety Instruction

1. Always read this manual carefully before installation

Operators and maintenance personnel must read and familiarise themselves with the manual carefully before installing, operating or maintaining the machine. Improper installation, operation or maintenance of the machine will likely result in serious injury or death.

2. Read and familiarise yourself with all safety statements

※ Read and familiarise yourself with all safety marks and safety statements before working;

※ Follow all occupational safety regulations, local laws and regulations, and other guidelines for professionals when operating;

※ Follow good work practices when assembling, repairing, and operating.

3. Familiarise yourself with the machine

※ Familiarise yourself with the performance and parameters of the machine before operation;

※ Check the machine carefully before operation and make sure that all devices are properly adjusted;

※ Ensure that the machine is securely mounted and replace parts that may be damaged;

※ Ensure that all safety labels are in the correct position and that the signs and lettering are clear.

4. Wear protective clothing

Wear safety clothing, protective goggles, face shield and dust mask to prevent splashing during operation.

5. Do not modify the machine in any way.

6. Maintaining the machine safely

※ When servicing, the machine must be lowered to a level surface, away from traffic and other dangerous places; if the machine needs to be lifted for

servicing, it must be stabilised with a solid object beforehand.

※ Use special tools as specified in the operating procedures. If you do not have a special tool, you can use a similar tool. However, if a common tool can cause damage to the part in question, you must use a special tool.

7. Safe operation of equipment


※ Do not operate the machine if you are drunk or under the influence of drugs;

※ If someone enters the hazardous area of operation, stop the machine immediately, and when you stop operation, lay the machine flat on the ground;

※ Do not exceed the rated working capacity, otherwise the machine may become unstable and cause the control to malfunction.

Product Instruction

1、 Product Structure Instruction

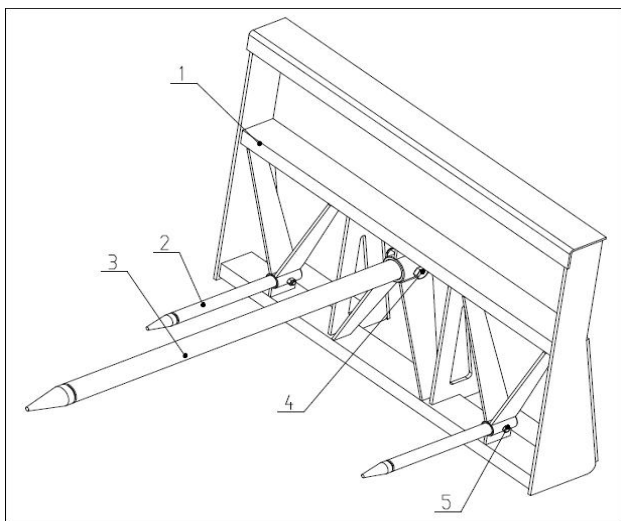

1-Frame 2-Short rod 3-Long rod 4-Long rod bolt 5-Short rod bolt

2、 Technical Performance Indicators

Technical Parameters	
Model	050701
Overall length (mm)	1400
Overall width (mm)	1206
Overall height (mm)	906
Weight (without pendant) (kg)	121
Number of poles	3
Mounting Model	Skid steer loader/excavator

Operation Instruction

1. Before using, make sure all the parts are installed well and without error, the operator should read and familiar with the safety rules and have a good mental state;
2. This machine has the characteristics of easy installation, flexible use, high working efficiency, reliable quality and superior performance.
3. The structure is reliable, simple and convenient, applicable to a wide range of high reliability.
4. String rod installation, replacement convenience
5. Please check whether the quick connecting part is connected reliably and whether the pin is installed in place before using the string pole machine, and use it only after the quick connecting device is connected securely.
6. When the tandem pole equipment is lifting or hovering, it is forbidden to pass or stand under the equipment.

-
7. Do not allow overload work, otherwise it may cause damage to structural parts.

Maintenance Instructions

1. Thoroughly clean the surface of all mud, dirt and grease.
2. Check the visible signs of wear and tear, and make necessary repairs to broken or damaged fittings to avoid affecting the next use.
3. Check all bolts, nuts and screws and tighten all slack nuts, nuts and screws.
4. Fill all lubrication points with grease.
5. Replace damaged or obscured labelling tags.
6. If the paint is peeling off or damaged, please make up the paint in time to prevent rusting.

Storage Instructions

1. When storing, place the machine flat on the partition and avoid direct contact with the ground.
2. Store the machine in a dry and safe place. Exposure will shorten the life of the machine.
3. Maintain this machine regularly.

※ Please pay attention to protect the product nameplate, the product nameplate is mutilated or lost will not be able to warranty.