



HCN ATTAMCHMENTS CONTENT YOUR NEED

Our contact information:

Address: No.1 Huake Road, Xuzhou Economic
and Technological Development Zone,
Xuzhou, China

Postcode: 221004

Tel: 0516-66881280 66881281

Fax: 0516-66881272

Website: <http://www.hcn-atta.com>



PRODUCT USER'S MANUAL

Product model: Gross mower

Preparation date: 2024.6.19

XUZHOU HCN ATTACHMENT MANUFACTURE CO., LTD.

Warm reminder:

Please read the manual carefully before installing and using the product.

CATALOGUE

1. Safety Instruction	1
2. Products Instruction	2
3. Operation Instruction	3
4. Maintenance Instructions	4
5. Storage Instructions	4

A safety note

1. Always read this manual carefully before installation

Operation and maintenance personnel must carefully read and be familiar with the manual before installing, operating and maintaining the machine. Incorrect installation, operation and maintenance of the machine may lead to serious injury or death.

2. Read and understand all of the safety statements

Read and familiarize yourself with all safety markers and safety statements before work;

Compliance with all occupational safety regulations, local laws and regulations and other professional guidelines;

Follow good working habits during assembly, maintenance and operation.

3. Be familiar with the machine and tool

Be familiar with and understand the performance and parameters of the machine before operation;

Before operation to carefully check the machines and tools, when all the devices are adjusted debugging can be operated;

Ensure that the machine is installed firmly installed, replace parts that may be damaged, and ensure that all hydraulic joints and hydraulic devices are firmly connected;

Ensure that all safety markers are in the correct position and are clearly marked.

4. Wear protective clothing

Wear safety clothing and protective goggles or face mask during operation to prevent splashes from causing damage to the human body during operation.

5. Do not modify the machine in any form

6. Safe maintenance machines

During maintenance, the machine must be lowered to the horizontal ground and far away from traffic and other dangerous places; if the machine needs to be raised for maintenance, a solid object must be used in advance;

Special tools shall be used during maintenance according to the operating procedures. If there are no special tools, some similar tools can be used, and whenever the ordinary tools can cause this or that damage, the special tools must be used.


7. Safe operation of the machine

Do not operate if you are drunk or taking medication;

If someone enters the operation danger area, the operator should immediately stop the operation of the machine. Stop the operation, please put the machine flat on the ground.

Two product description

Product structure description:

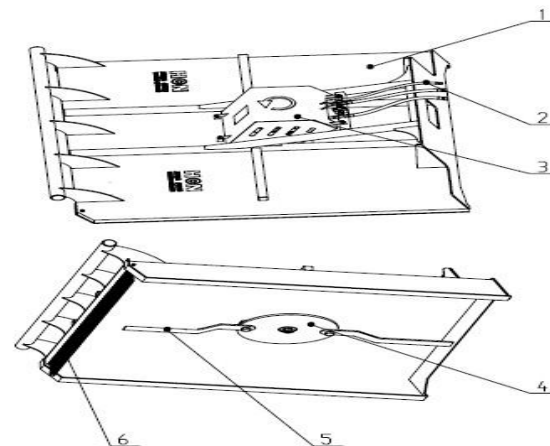

1-Frame 2-hydraulic system 3-cover 4-knife disc 5-blade 6-chain

2. Technical performance indicators:

model	050860I	050872I
length (mm)	1938	2344
total width (mm)	1831	2033
overall height (mm)	593	555
all up (kg)	480	635
Crowing width (mm)	1524	1828
Working Pressure (Mpa)	16-21	16-21
Minimum cutting height (mm)	50	50
Number of blades	2	2
Motor flow (L/Min)	60-80	75-90
Adapted models	Skid steer loader /small loader	

three. operation declaration

This machine is installed in front of the loader, relying on the loader to realize the clamp and handling of oil barrels, which is suitable for port, oil warehouse, oil trading market, and other oil barrel handling operations. Specific operation of oil barrel clips are as follows:

The host machine and the pendant board are fixed by the pin shaft.

The lawn mower connects the in, out and drain pipe with the in, out and drain pipe of the main engine.

The main engine adjusts the parallelism and height between the mower and the ground, and after the adjustment, the main engine gives oil (Note: the lawn mower rotates counterclockwise, and pay attention to the direction when feeding oil.) Do your homework.

**Note: Please add according to the situation of the host
(bucket,bucket) limit block!**

After the work is finished, put the lawn mower flat on the ground or platform, pull out the pendant pin shaft, drive the main engine away from the lawn mower to clean up and fill the lubricating oil, and the work can be finished for the next use.

Four maintenance instructions

Thoroughly clean all dirt, dirt and grease.

Check the visible signs of wear and repair the damaged or damaged accessories as necessary to avoid affecting the next use.

Check all the bolts, nuts, and screws, and tighten all the loose nuts, caps, and screws.

Check the hydraulic system and solenoid valve set and tighten all loose line connections.

All leaking oil cylinder rods are coated with grease.

Bubutter at all lubrication points.

Replace the damaged or blurred labels.

If the paint surface is falling off or damaged, please fill the paint in time to prevent rust.

Please pay attention to the protection of the product nameplate, the product nameplate is incomplete or lost will not be guaranteed.

Five storage instructions

1. When warehousing, put the machine on the partition plate, and prohibit direct contact with the ground.
2. It should be stored in a dry and safe place, and the exposure will shorten the life of the equipment.

3. The hydraulic pipeline is closed with an oil cap.
4. All leaky cylinder rods are coated with grease.
5. Maintain and maintain the machine regularly.